



WESTLAM AlkaMax Ax

5/8" to 3/4" // Hardwood // Melamine HDO

www.westlam.com

phone 604 888 2894

email info@westlam.com

Using the most current Concrete Form HDO technology, our Crown Alkamax is engineered with a proven Melamine HDO that can best stand up to high-alkalinity concrete mixes as it is the most durable panel in the Crown product lineup.

Features & Benefits

Crown Alkamax is constructed with high strength Douglas fir inner plies and durable hardwood face and back veneer. The high resin content Melamine HDO is applied in a one-step process. All adhesives used are fully waterproof phenolic resins that meet APA exterior glue bond standards.

Available in 48" x 96" and 24" x 96" in 5/8" to 3/4" thickness.

✓ APA Structurally Certified

All of our Hardwood products are structurally certified by the APA and undergo rigorous inspection and testing by our Quality Control team.

✓ Melamine HDO

Crown Alkamax Melamine HDO provides the highest level of alkaline resistance of any Crown Performance Panel.

✓ Hardwood Face and Back

A durable hardwood veneer is used for the face and back providing a smoother pouring surface and a more durable panel than softwood options.

✓ Two Piece Inner Plies

Our two piece, Douglas fir inner ply construction method is engineered to provide a more solid panel that can better stand up to job site wear and tear.

✓ Multi-Layer Edge Protection

For additional moisture protection, all panels are edge puttied and then coated with a silver, aluminized, resin-rich alkylid edge seal.

✓ Factory Applied Release Agent

For safety reasons, Crown Alkamax does not come factory coated with release agent. Prior to each use, application of Nox-Crete or equivalent release agent is required.


See Care and Handling for more information

Load-Span Tables - Wet Conditions

Allowable pressure (psf) for the indicated deflection limits for indicated thickness and support direction

Support Span	5/8"		11/16"		3/4"	
	L/270	L/360	L/270	L/360	L/270	L/360
8"	1955	1955	2055	2055	2230	2230
12"	1045	780	1255	945	1380	1045
16"	475	355	585	440	665	495
19.2"	280	210	350	265	405	300
24"	145	110	185	140	215	160
8' Perpendicular to supports						

Support Span	5/8"		11/16"		3/4"	
	L/270	L/360	L/270	L/360	L/270	L/360
8"	1305	1305	1515	1515	1655	1655
12"	805	605	940	815	1025	1025
16"	340	255	465	350	605	455
19.2"	240	180	300	250	375	325
24"	120	-	170	125	225	170
8' Parallel to supports						

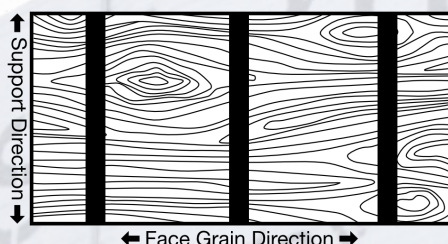

Note: Applicable for plywood across two or more spans, and on supports at least 1.5" wide
Load Tables developed by APA: The Engineered Wood Association



Westlam Industries

Get the most out of your plywood by following these simple guidelines

Care and Handling - Minimum Requirements

Crown Performance Panels are quality plywood panels designed to provide the maximum number of re-uses as possible. In order to achieve the full potential for these products, the following minimum care and handling procedures are required:

Storage

Crown Performance Panels need to be stored flat, on a dry, well drained, level platform, under shelter and otherwise protected. Steel straps should be cut and the forming surface on the top panel covered. Avoid exposure of the panel surface to direct sunlight and rain, to minimize surface degradation. Ensure panels are properly cleaned prior to stacking or storage.

Fabrication

Crown Performance Panels can be readily worked, with good quality hand or power tools (carbide tipped saw blades are recommended). Panels should be fixed to forming members with screws. If concrete appearance is a factor, screws should be countersunk and filled. Panel joint leakage or details can be reduced by filling joints with a suitable sealant between panel edges (please consult your sealant supplier for the proper product for your application). While panels are edged sealed at the factory, any field cuts or holes that exposed wood need to be resealed with a minimum of two coats of high quality polyurethane varnish to reduce moisture absorption. Damaged panels must always be appropriately repaired prior to re-use.

Release Treating

Crown 43, Crown 44 and Crown 48 are factory coated with Nox-Crete water based chemically active release agent. For safety and transportation reasons, Crown HDO and Crown Alkamax are not factory coated with Nox-Crete release agent. The use of Nox-Crete or equivalent release agents is highly recommended and with high alkaline concrete mixes, your release agent supplier can suggest a proper range of release agents for improved panel life span. Before first use, and after each pour, Nox-Crete or an equivalent chemically active release agent must be applied to all Crown concrete form panels. Do not use any form release agents that contain diesel fuel, solvents or engine oil. These will degrade the overlay surface and will negatively affect performance. Special caution must be taken with Melamine HDO panels such as our Crown Alkamax series, as they become slippery when wet.

Concrete Placement

Crown Performance Panels are resistant to abrasion and impact. However, as with any surface, it can be damaged through improper use. The rate of pour and slump factor of the concrete must be limited to that assumed in the design of the form. To minimize form damage, rubber tipped vibrators are recommended and should be used for consolidation only. Vibrators should never be used for moving concrete horizontally in the forms. Avoid aiming the concrete directly at formwork panels when pumping. This can cause abrasion and damage to the overlay surface.

Stripping

With proper release treatment, stripping forms is easy. Do not force panels with metal pry bars, or allow panels to be dropped and mis-handled. The use of wooden wedges is recommended to loosen panels. Clean panels right after stripping prior to the hardening of residue. Use non-scratching tools such as stiff non-metallic brushes and plastic or wood scrapers. Once cleaned, remove all nails and screws, re-oil panels, and stack face to face to prevent rapid drying of the wood and overlay surface.

For further instructions please see APA's Concrete Forming Design / Construction Guide at: www.apawood.org



Scan me for a
digital brochure

www.westlam.com